



# LeapFrog LeapPad Platinum Screen Replacement

In this step-by-step guide, you will be shown how to remove the touch screen.

Written By: David Lee



## INTRODUCTION

Use this guide to remove all of the electrical components inside your LeapPad Platinum tablet and then replace the touch screen.


---



### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Battery

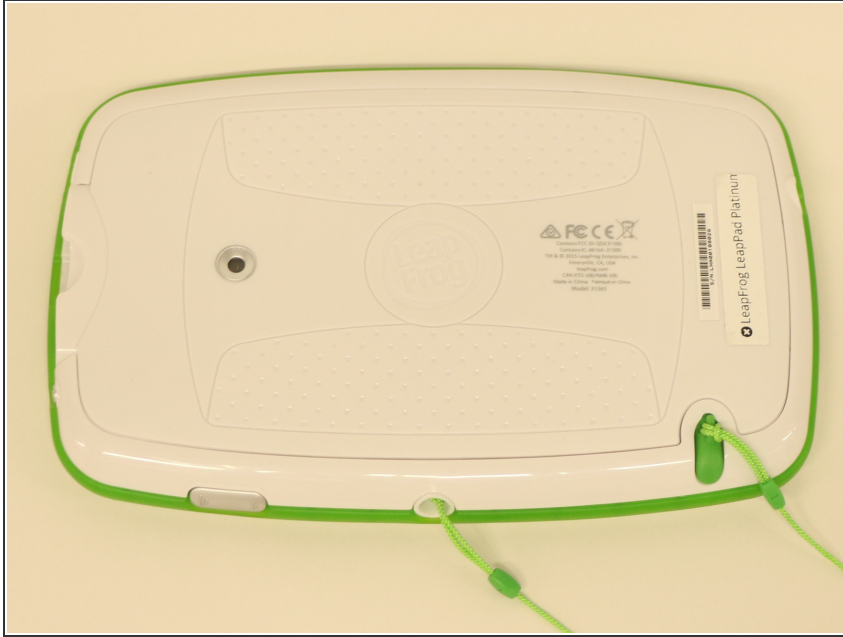

- Place your tablet on a flat surface with the screen facing down.

## Step 2



- Using a plastic opening tool, pry off the plastic border by inserting it in the space between the green bumper and the white plastic on the edge of the tablet.
- ⓘ The border snaps into place, so don't be too worried if you hear a cracking noise while prying it off.

### Step 3



- Remove the 11 Phillips screws (8.0 mm) located around the edge of the back cover with a Phillips screwdriver.


### Step 4



- Pull the back cover off of your device.




## Step 5

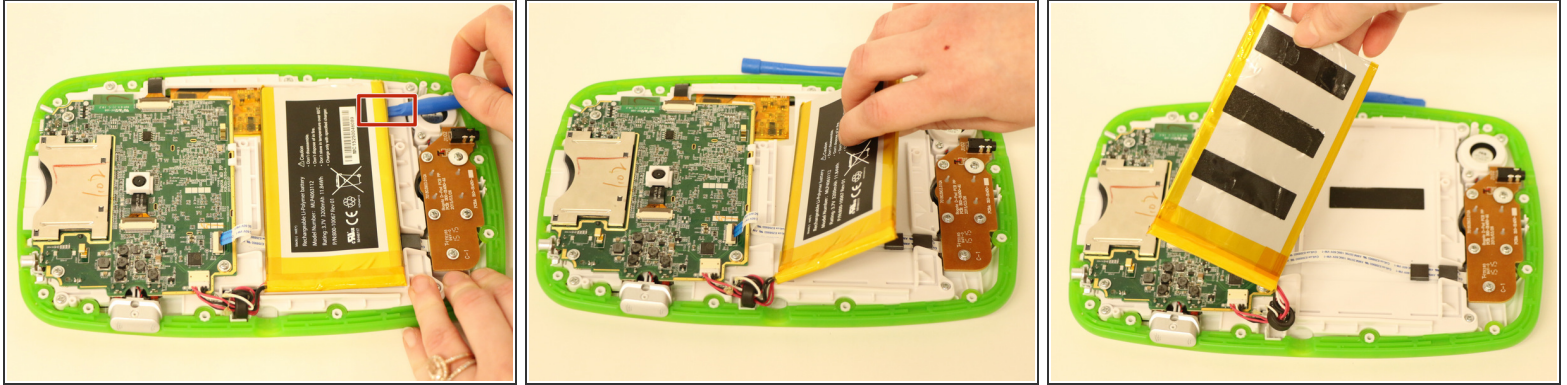



- Wedge a plastic opening tool underneath the battery and lift the battery up.
- ❗ The battery is held in place by an adhesive strip, so it can be difficult to pry off.

## Step 6

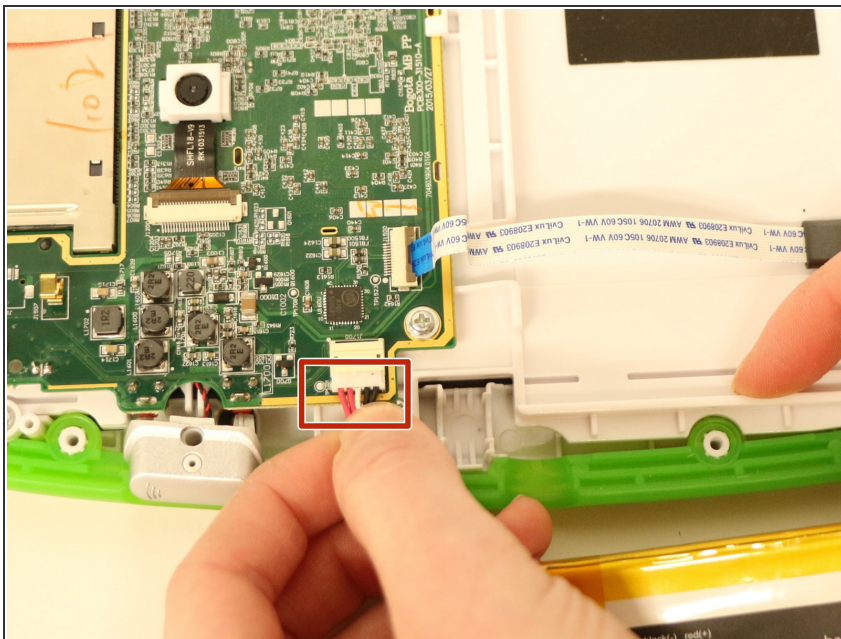



- The battery has red, black, and white wires that are all connected to the motherboard through a plastic clip. Unplug this plastic clip to fully remove the battery from your device.

## Step 7 — Motherboard

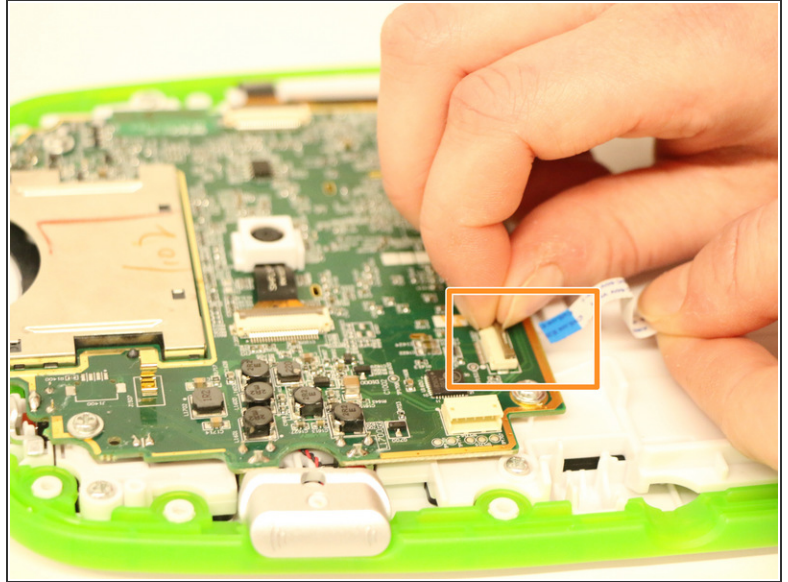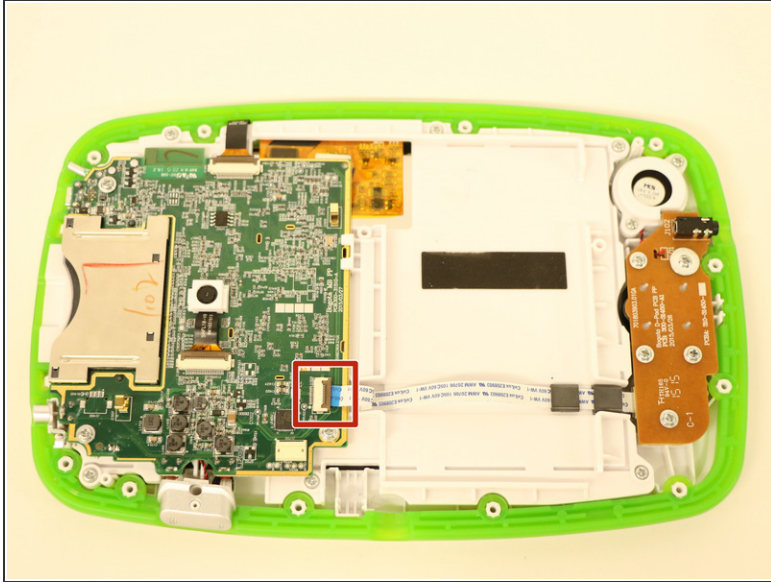

- Locate the white ribbon cable connected to the motherboard.
- Disconnect the cable by flipping up the metal tab on the connector and sliding the cable out.


## Step 8

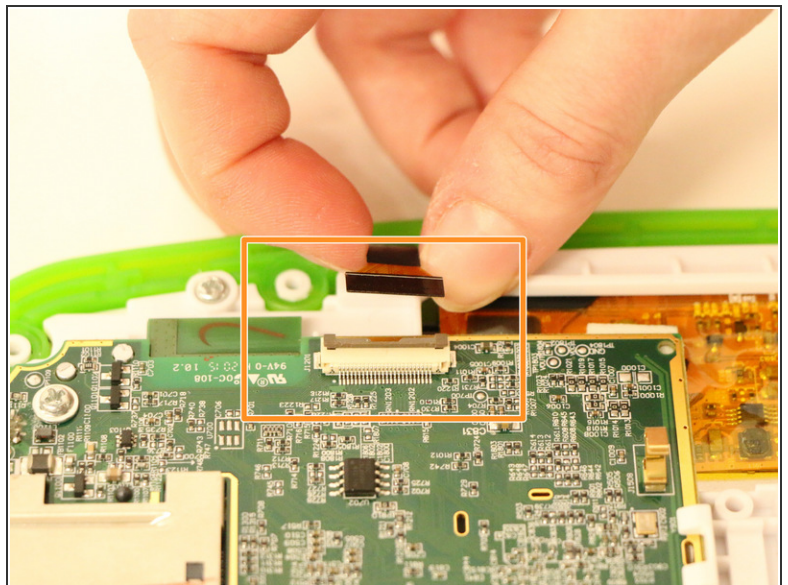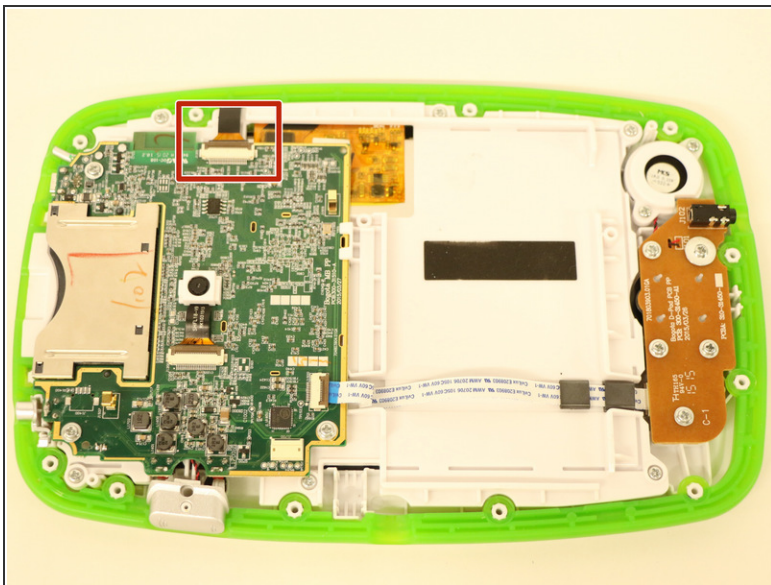

- Locate the black ribbon cable which is connected to the motherboard.
- Disconnect the cable by flipping up the metal tab on the connector and sliding the cable out.




## Step 9

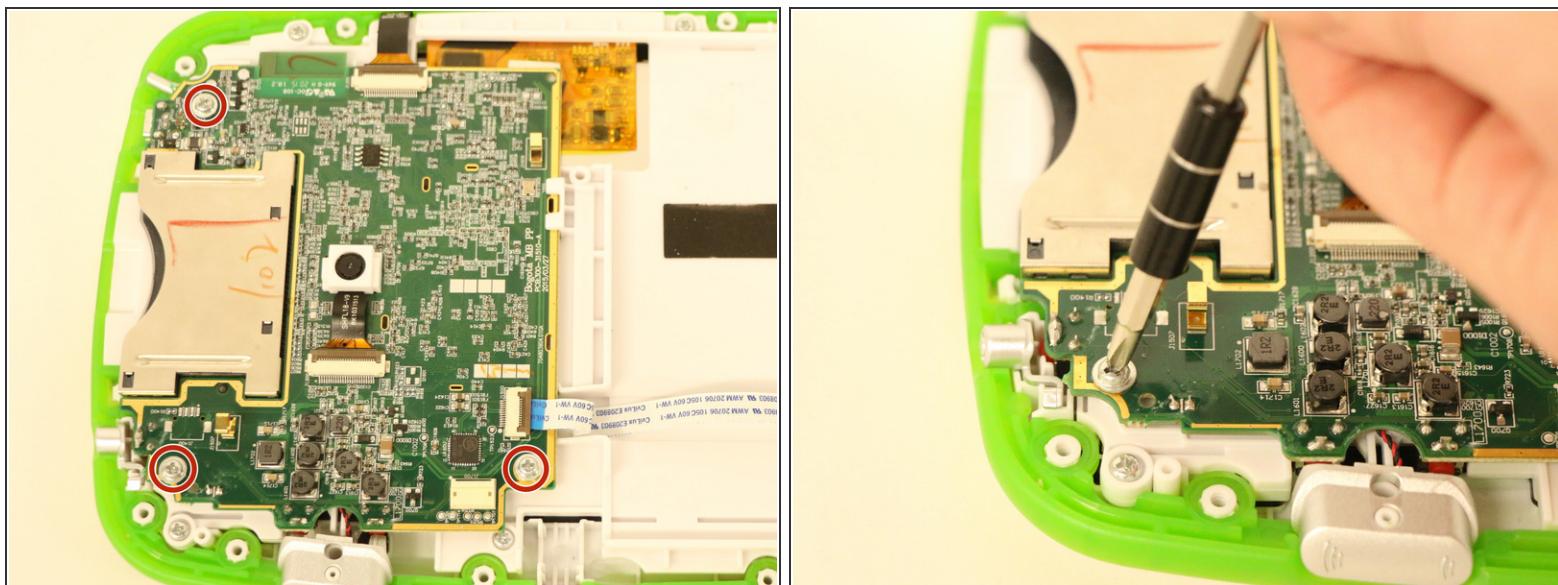


- Remove the three 4.0 mm Phillips screws located in the corners of the motherboard.

## Step 10

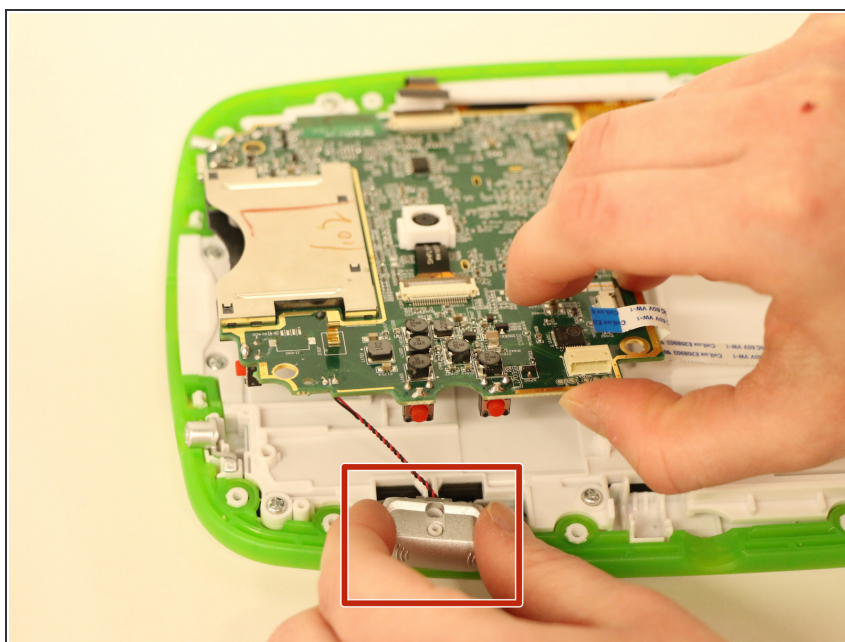



- Lift up the front edge of the motherboard.
- Lift the volume-control button out of the device and set it aside.

## Step 11

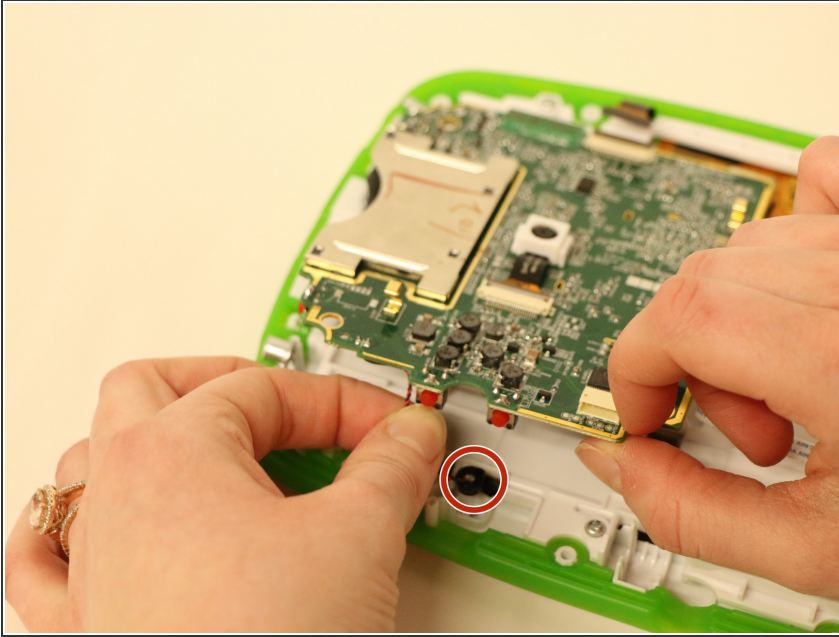

- Gently tug upwards on the red and black twisted wires located near the button you just removed to release the black rubber base they are connected to from the device.
- ⓘ This does not take much force, so it is likely that this piece will pop out of place when initially lifting the motherboard.



## Step 12

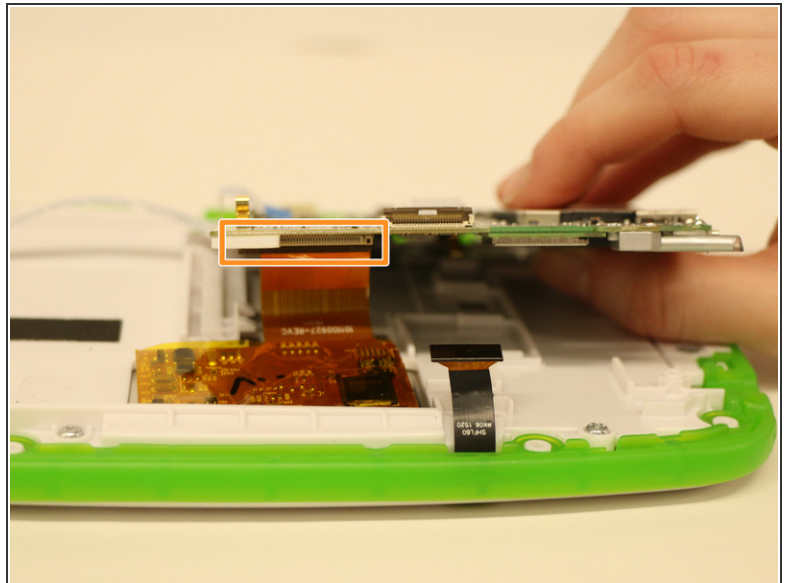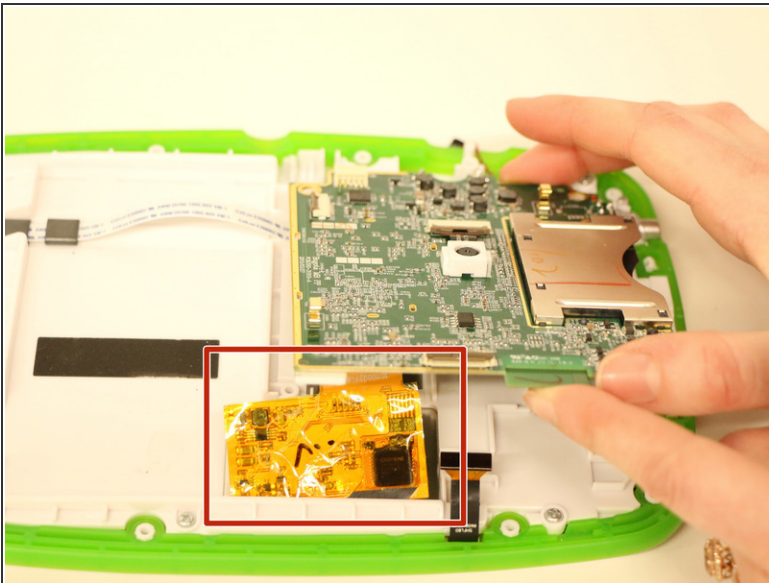

- Rotate your device 180 degrees so the the motherboard is on your right-hand side and gently lift the front edge of the motherboard to reveal an orange sheet of plastic.
- Disconnect the orange sheet from the motherboard by lifting the metal tab on the connector (as you did for the cables in steps 1 and 2), and lift the motherboard completely out of the device.





## Step 13 — Speaker

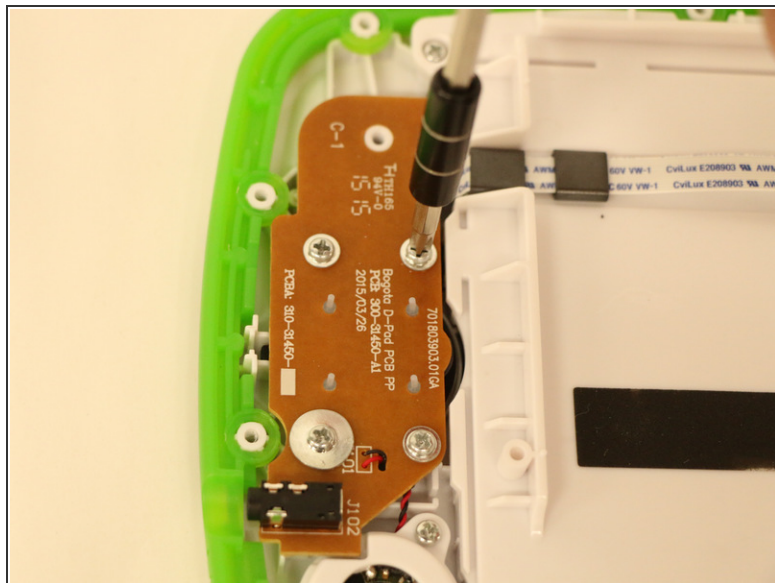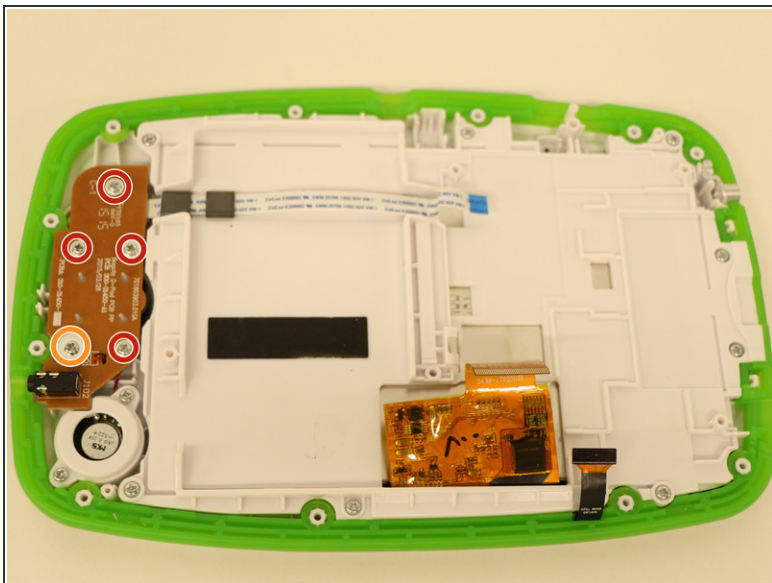

- Remove the brown speaker board located on the left side of the LeapPad by removing the following screws holding it in place:
  - Four 3.0mm Phillips screws
  - One 7.0mm Phillips screw

## Step 14

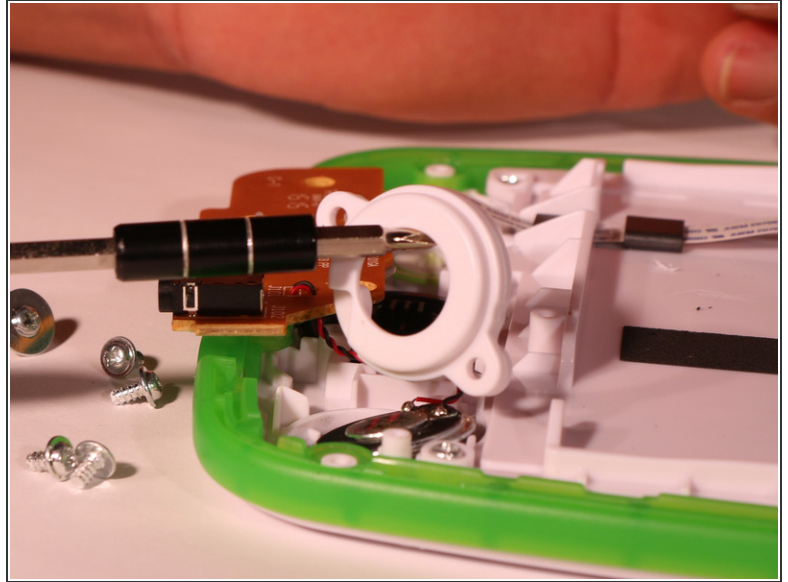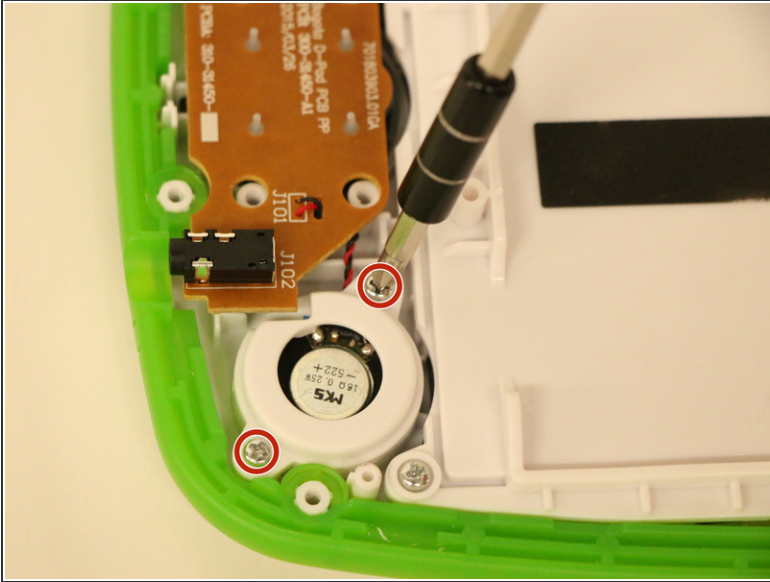

- Locate the circular plastic speaker cover, remove the two 5.0mm Phillips screws holding it in place, and gently lift the cover away from the device.


## Step 15



- Lift up the speaker board and locate the white ribbon attached to its underside.
  - Fully remove the speaker board from the device by gently pulling the ribbon cables out of the slot.
- ⚠ Be gentle when working with the ribbon as it can be damaged easily.
- ℹ Tweezers or a pointed plastic spudger will help guide the ribbon back through the black tabs when reassembling your device.





## Step 16 — Touch Screen

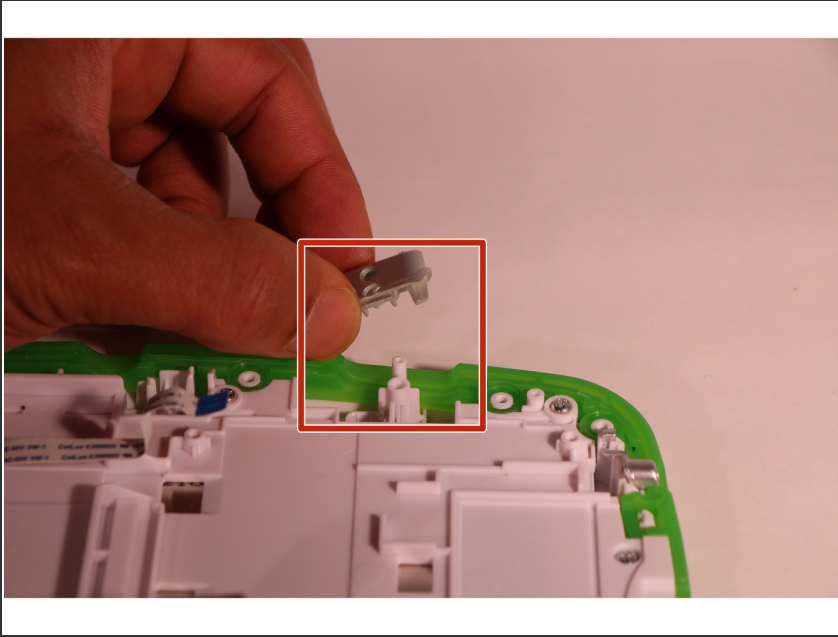

- Remove the power and the volume buttons from their cradles.
- ⓘ This does not require any tool, just lift them out and put them in a secure place.

## Step 17

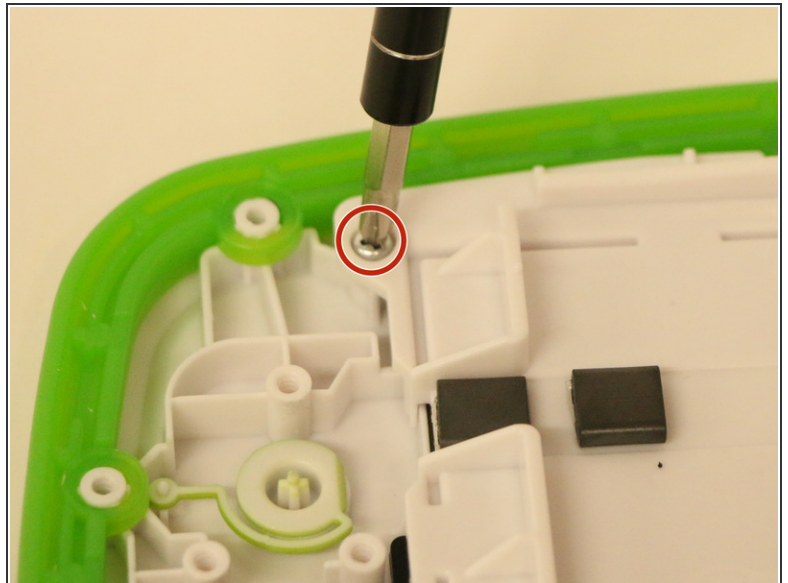
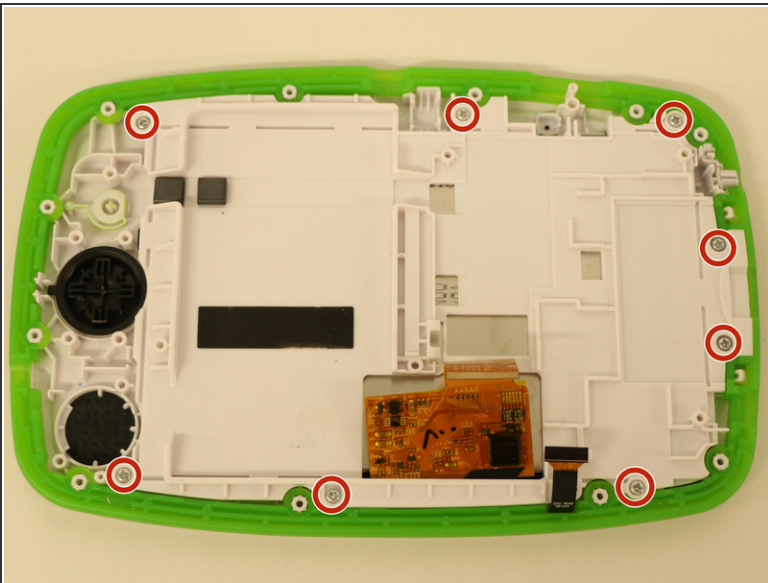


- Remove the eight 4.0 mm screws for the plastic backing that covers the screen.

⚠ Be certain to keep track of your screws.



ⓘ The directional pad is now loose and can also be removed.

## Step 18

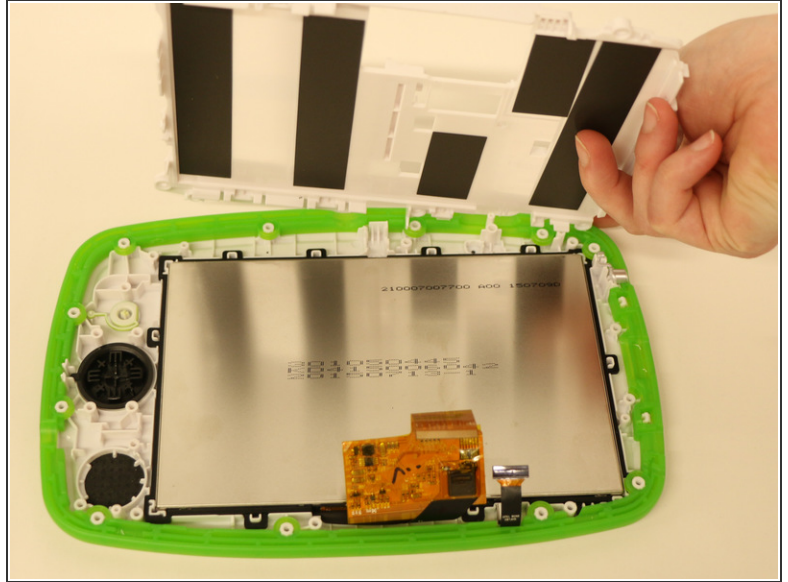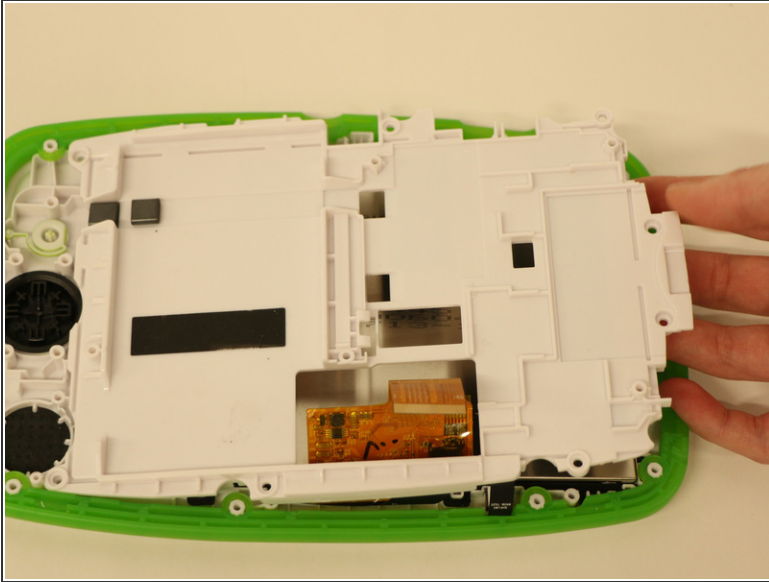

- Carefully lift out the plastic plate and set it aside.

## Step 19

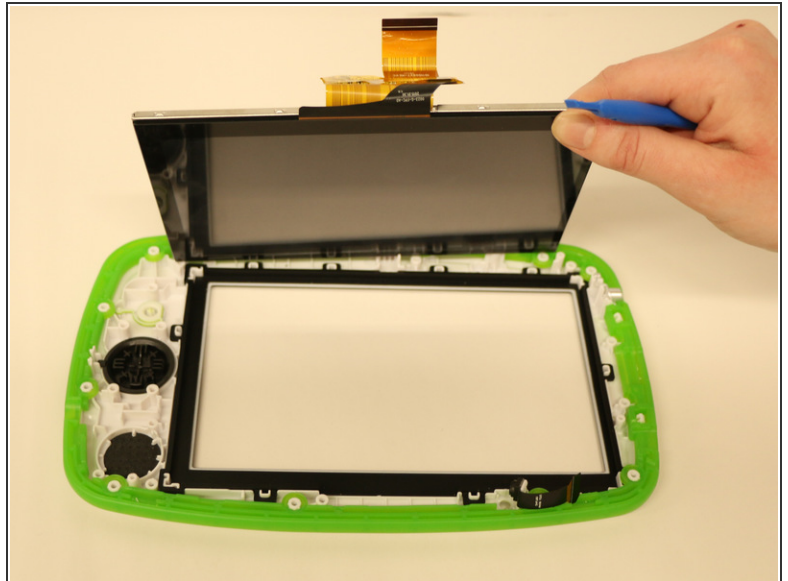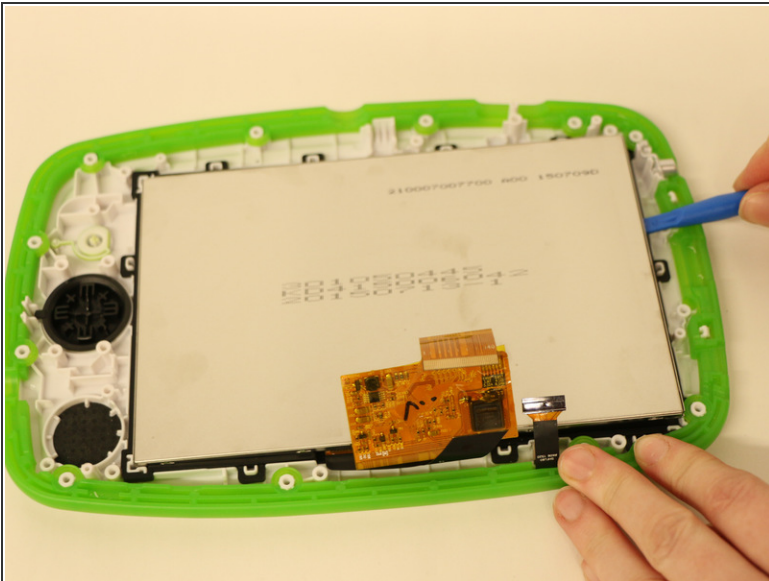

- The screen is now completely accessible and can be lifted out of its cradle. Use the plastic spudger to safely and carefully lift the screen up.
- ⚠ Screens are very fragile so be sure to have a safe and secure place to put it, safely away from any magnetic devices.



To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-16 03:11:45 PM.